



\\STANDARD_SPECS & DETAIL\S\2019\Detail Plates\ERO-12_EROSION CONTROL BLANKET INSTALLATION.dwg

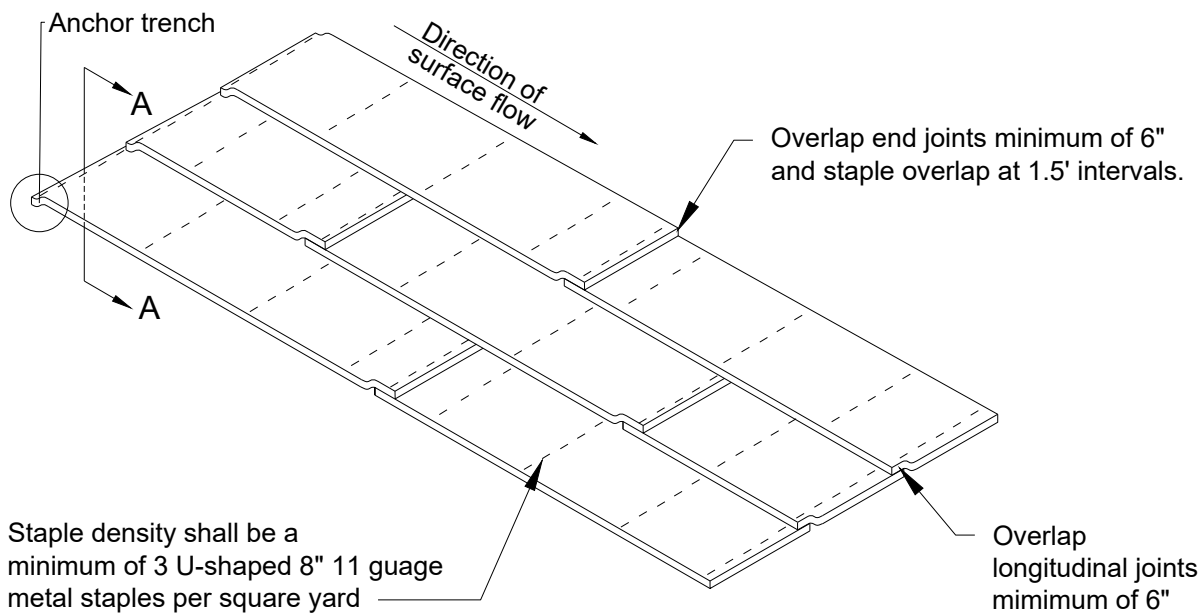

Notes:

1. Dig 6" x 6" trench.
2. Lay blanket in trench.
3. Staple at 1.5' intervals max. in anchor trench.
4. Backfill with natural soil and compact.
5. Blanket length shall not exceed 100' without an anchor trench.

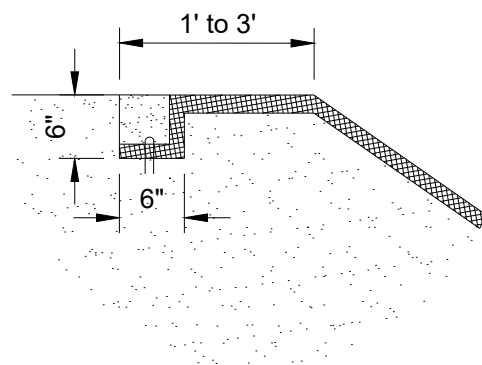

SECTION A-A

City Plate No.:

ERO-12

Last Revision:

7/2/2019

File:

ERO-12.dwg

**STANDARD DETAILS
EROSION CONTROL BLANKET
INSTALLATION**

