


Notes:

1. Dig 6" x 6" trench.
2. Lay blanket in trench.
3. Staple at 1.5' intervals max. in anchor trench.
4. Backfill with natural soil and compact.
5. Blanket length shall not exceed 100' without an anchor trench.

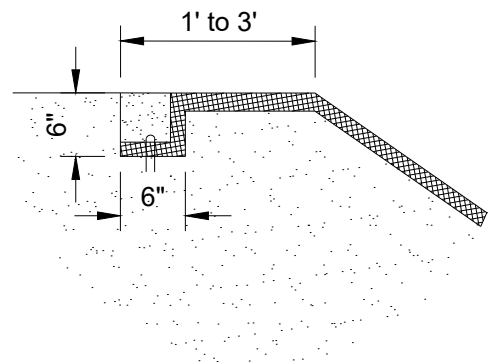

SECTION A-A

M:\STANDARD_SPECS & DETAILS\2021\Details\ERO-12_ EROSION CONTROL BLANKET INSTALLATION.dwg

City Plate No.:
ERO-12
Last Revision:
12/18/2020
Section:
1200

**STANDARD DETAILS
EROSION CONTROL BLANKET
INSTALLATION**

